 


# Sauna LED Light Instructions

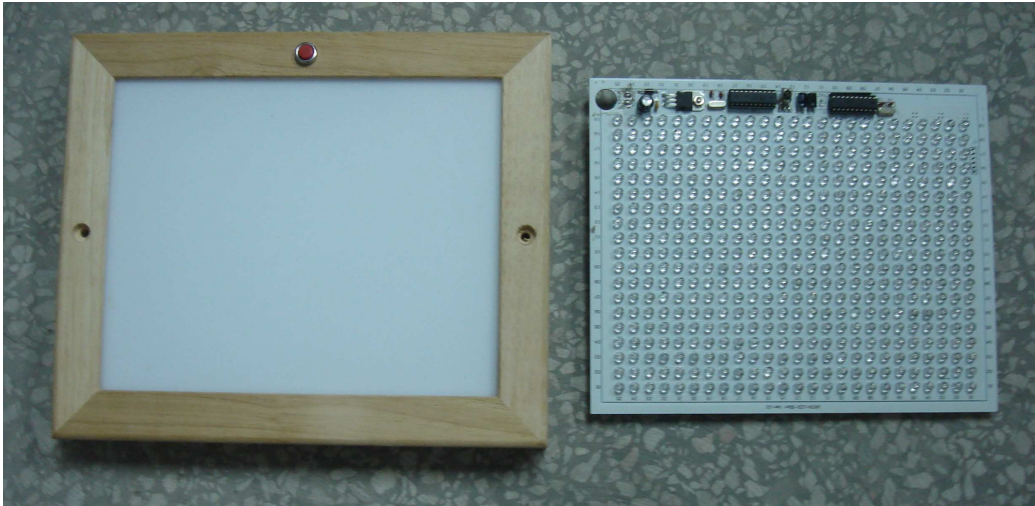

## Important

- Should be installed by a competent person.
- Must be positioned lower than 1500mm in the cabin. [N/A for infra-red cabins]
- All wires must be kept outside of the cabin.
- If using the remote control within the cabin keep on low benches as it can get quite hot.

## Installation

Locate where you would like the unit, this must be no higher than 1500mm from the floor. Drill a hole through for the power cable thread through from the back and connect to the light, now push the light onto the wall, make it level and screw in place using the brackets.

## Operation

The light can either be controlled by the remote or the button on the front. The button on the front turns the light on and each time you press it will change to a different colour, if left it will then phase into chromatherapy and slowly sequence through all the colours in the spectrum.

The remote can also change through the colours, colour cycle and brightness.

Speed----color-changing process (takes 450 seconds for a cycle)

“+” (The changing cycle):

red and green → green fade out → red → blue fade in → blue and red → red  
fade out → blue → green fade in → blue and green → blue fade out → green  
→ red fade in → red and green

“-”(The changing cycle)

blue → green fade in → blue and green → blue fade out → green → red fade  
in → red and green → green fade out → red → blue fade in → blue and red →  
red fade out

**Specification:**

Colors/White	12 Colors + white
Usage	For 2 to 5 M <sup>2</sup> Sauna
Automatic Programs	2 Programs
Lifetime of LED	Approx 15000 hours
Working environment	UP to 100 <b>centi-degree</b>
Product Dimension	26*22*3.5 cm
Power Supply	12V DC Adapter(110-240V AC,50/60HZ
Consumption	36 Watts
Dimm.Of lighting area	20.8*16.7 cm
Number of LED	475